

LED blinder light

LED Matrix 16X30W COB BLINDER

RGB3IN1 LED

USER MANUAL

Ver1.0

Table of contents

1. Before you operating	2
1.1 Packing list	2
1.2 Unpacking instructions	2
1.3 AC Power	2
1.4 Safety instructions	3
2. Introduction	4
2.1 Features	4
2.2 DMX channel	4
3. Setup	10
3.1 Fuse replacement	10
3.2 Fixture linking	10
3.3 Setting up a DMX signal connect	12
3.4 Master/Slave fixture linking	12
3.5 installation	12
4. Operating instructions	12
4.1 Menu configure	12
4.2 Menu function map	14
4.3 User configurations	14
4.4 DMX channel values	15
4.5 LED rangement	29
5. Technical specifications	29

1. Before you operating

1.1 Packing list

Product name	quantity
LED Matrix Light	1 pcs
Power cable	1pcs
User manual	1pcs

1.2 Unpacking instructions

When you get this product, please take it from carton carefully to make sure whether all the accessories are in and damaged or not

When you find that there are any parts or wrong sign with the carton, or non-operation, please inform us and to keep the carton and shipping bill completely.

1.3 AC Power

Please check the manual book before you operate the light. The rating current of the light listed which shows the average current-consume under the normal circumstances.

All the lights must be offered shoot-through circuit, it could not be connected dimmer circuit, although the dimmer channels are completely for 1-100% switch.

Before the light's working, please confirm the correct voltage.

Warning! Confirm the voltage to select switch which can be matched the circuit with the light. If it is different from the supply power and light, it will damage the light! All the light must be connected the earth, not all the lights have the switch to be selected.

Please connect the correct voltage!

1.4 Safety instructions

Please read these instructions carefully, it includes important information about the light's installation, usage and maintenance of this product.

Please confirm the same voltage to the light.

The light could not be water-proof, it only allow to be used in door. Don't expand the light in wet or rain day, to avoid fire or damaged light.

Please confirm there is no flammable material around the light.

The light must be set up the ventilating place. The distance is $\geq 51\text{cm}$ around approach material. To check the air passage is OK at any time.

The Maximum temperature is $\leq 40^{\circ}\text{C}$ (104°F).

When the lights has problems, please stop to use to contact the supplier. Don't repair it by yourself!

Don't connect by a dimmer.

To confirm the power wire is straight and non-damaged. Don't pull it directly.

Don't look at the bulb when the light is working to avoid any hurt.

2. Introduction

2.1 Features

96/48/24/6 DMX channels.

RGB 3-in-1 COB LED light source

life long is 50000-10000 hours.

Variable electronic dimmer(0-100%).

Control mode:Auto,sound,DMX512 mode

Cool: temperature protector

2.2 DMX channel

96CH/48CH

CH	96CH	48CH
1	Dimmer	Red (1)
2	Switching the LEDs/Strobe	Green (1)
3	Mix color	Blue (1)
4	Auto mix color	Red (2)
5	Color change	Green (2)
6	Red color fade	Blue (2)
7	Green color fade	Red (3)
8	Blue color fade	Green (3)
9	Red+green color fade	Blue (3)

10	Red+blue color fade	Red (4)
11	Green+blue color fade	Green (4)
12	Sound control	Blue (4)
13	Red (1,2,3,4)	Red (5)
14	Green (1,2,3,4)	Green (5)
15	Blue (1,2,3,4)	Blue (5)
16	Red (5,6,7,8)	Red (6)
17	Green (5,6,7,8)	Green (6)
18	Blue (5,6,7,8)	Blue (6)
19	Red (9,10,11,12)	Red (7)
20	Green (9,10,11,12)	Green (7)
21	Blue (9,10,11,12)	Blue (7)
22	Red (13,14,15,16)	Red (8)
23	Green (13,14,15,16)	Green (8)
24	Blue (13,14,15,16)	Blue (8)
25	Red (1,5,9,13)	Red (9)
26	Green (1,5,9,13)	Green (9)
27	Blue (1,5,9,13)	Blue (9)
28	Red (2,6,10,14)	Red (10)
29	Green (2,6,10,14)	Green (10)

30	Blue (2,6,10,14)	Blue (10)
31	Red (3,7,11,15)	Red (11)
32	Green (3,7,11,15)	Green (11)
33	Blue (3,7,11,15)	Blue (11)
34	Red (4,8,12,16)	Red (12)
35	Green (4,8,12,16)	Green (12)
36	Blue (4,8,12,16)	Blue (12)
37	Red (1,2,5,6)	Red (13)
38	Green (1,2,5,6)	Green (13)
39	Blue (1,2,5,6)	Blue (13)
40	Red (9,10,13,14)	Red (14)
41	Green (9,10,13,14)	Green (14)
42	Blue (9,10,13,14)	Blue (14)
43	Red (11,12,15,16)	Red (15)
44	Green (11,12,15,16)	Green (15)
45	Blue (11,12,15,16)	Blue (15)
46	Red (3,4,7,8)	Red (16)
47	Green (3,4,7,8)	Green (16)
48	Blue (3,4,7,8)	Blue (16)
49	Red (1)	

50	Green (1)	
51	Blue (1)	
52	Red (2)	
53	Green (2)	
54	Blue (2)	
55	Red (3)	
56	Green (3)	
57	Blue (3)	
58	Red (4)	
59	Green (4)	
60	Blue (4)	
61	Red (5)	
62	Green (5)	
63	Blue (5)	
64	Red (6)	
65	Green (6)	
66	Blue (6)	
67	Red (7)	
68	Green (7)	
69	Blue (7)	
70	Red (8)	

71	Green (8)	
72	Blue (8)	
73	Red (9)	
74	Green (9)	
75	Blue (9)	
76	Red (10)	
77	Green (10)	
78	Blue (10)	
79	Red (11)	
80	Green (11)	
81	Blue (11)	
82	Red (12)	
83	Green (12)	
84	Blue (12)	
85	Red (13)	
86	Green (13)	
87	Blue (13)	
88	Red (14)	
89	Green (14)	
90	Blue (14)	
91	Red (15)	

92	Green (15)	
93	Blue (15)	
94	Red (16)	
95	Green (16)	
96	Blue (16)	

24CH/6CH

CH	24CH	6CH
1	Red (1,2,3,4)	Dimmer
2	Green (1,2,3,4)	Switching the LEDs/Strobe
3	Blue (1,2,3,4)	Red
4	Red (5,6,7,8)	Green
5	Green (5,6,7,8)	Blue
6	Blue (5,6,7,8)	Sound control
7	Red (9,10,11,12)	
8	Green (9,10,11,12)	
9	Blue (9,10,11,12)	
10	Red (13,14,15,16)	
11	Green (13,14,15,16)	
12	Blue (13,14,15,16)	
13	Red (1,5,9,13)	

14	Green (1,5,9,13)	
15	Blue (1,5,9,13)	
16	Red (2,6,10,14)	
17	Green (2,6,10,14)	
18	Blue (2,6,10,14)	
19	Red (3,7,11,15)	
20	Green (3,7,11,15)	
21	Blue (3,7,11,15)	
22	Red (4,8,12,16)	
23	Green (4,8,12,16)	
24	Blue (4,8,12,16)	

Note: *When the channel is opening, please confirm the channel 1st is phase-in.

3. Setup

3.1 Fixture linking

When you control the light's master/slave or DMX 512 signal agreement, the lights can be connected by signal wire which the distance is $\leq 500\text{m}$, The maximum connect lights are 32pcs more or less, and adapt DMX light pair to segregate the signal zoom equipment, in order to protect the light's signal won't be interrupted by other signal. Moreover, it won't affect by the signal wire's length

Data connect

Data cable is connected by DMX data wire, and XLR. Please use hi-quality data cable signal wire, it won't be interrupted by magnetic.

Characteristics of DMX data cable

2 conductors' double tree lace and shield.

The maximum capacitance of the conductors-30 pF/ft.

The maximum capacitance of the conductor and shield -55 pF/ft.


The maximum resistance is 20 ohms/1000ft.

The nominal impedance 100-140 ohms.

DMX opt coupler segregate signal zoom equipment's 3 pin(5 pin) XLR plug.

3.2 Setting up a DMX signal connect

As following pictures show, please connect the first light to the signal cable which is with XLR by DMX controller, then, connect light in series.

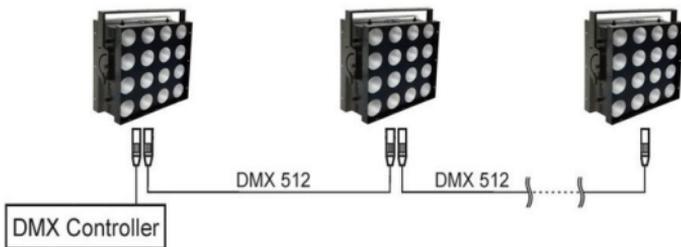


The light must be set up the ventilating place. To confirm there is nothing to hinder the heat dissipation place. When the light is hanged, please choose a safety wire.

4. Operating instructions

4.1 Menu configurations

Access control panel functions using the four panel buttons located directly under near the the LCD Display.

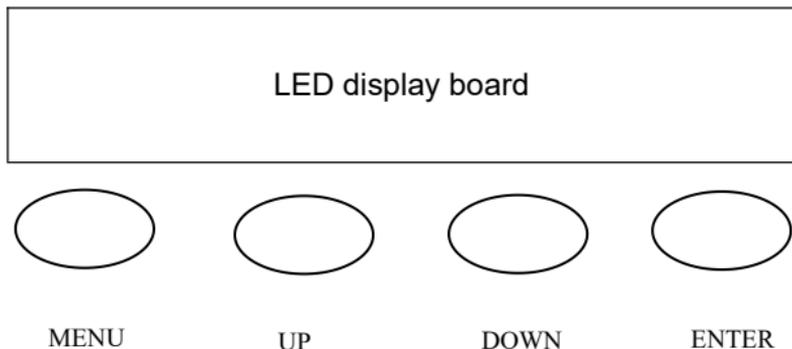

Button	Function
MENU	Used to access the menu or return to a previous menu option.
DOWN	Scrolls through menu options in descending order.
UP	Scrolls through menu options in ascending order.
ENTER	Used to select and store the current menu or option within a menu.


When a menu function is selected, the display will show immediately the first available option for the selected menu

function. To select a menu item, press<ENTER>.

Press the <MENU> button repeatedly until you reach the desired menu function. Use the <UP> and <DOWN> buttons to navigate the menu options. Press the <ENTER> button to select the menu function currently displayed, or to enable a menu option. To return to the previous option or menu without changing the value, press the <MENU> button.

No alternative worth that return re-option or menu, press (MENU) button

4.2 Menu function map

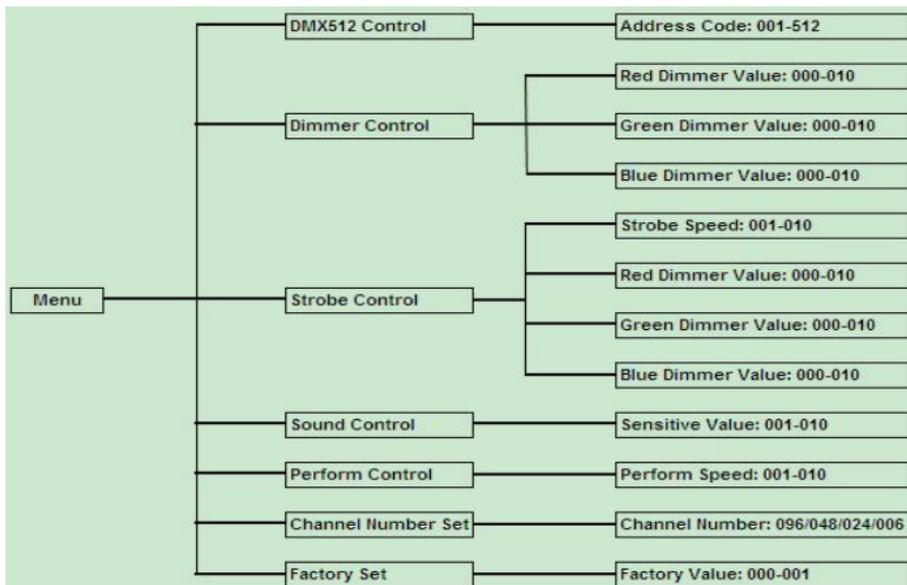

4.3 User configurations

Set-up 1pcs light's menu mode (Auto-running)

.Press the MENU, such as the picture 4.2 shows the menu function

.Use the UP/DOWN buttons to choose the right one to confirm.

Set-up Master-slave mode

Press the MENU, same as picture 4.2 shows the menu function Master: Set any one of lights to auto、 sound or strobe control mode

Slave: Set them to DMX mode and their address code to1.

Notes: Each Master-slave group can be one and only light in master, ensure lights under this group without connection with any DMX controller.

Set-up DMX mode

The light can connect to the DMX controller to receive its signal indication, which control by DMX controller. DMX value is referenced by “**4.4 DMX channel values**”.

4.4 DMX channel values

96 DMX channels:

CH	Value	Function
1	0-255	Dimmer 0-100%
2	0-10 11-30 31-200 201-225 226-250 251-255	Switching the LEDs/Strobe LED OFF Neutral Strobe with increase speed Random Strobe 1 with increase speed Random Strobe 2 with increase speed Neutral

3	0-2 3-41 42-83 84-125 126-167 168-209 210-251 252-255	Mix color No function Red: 100% Blue: 0 Green:0-100% Red: 100%-0 Blue: 0 Green:100% Red: 0 Blue: 0-100% Green:100% Red: 0 Blue: 100% Green:100%-0 Red: 0-100% Blue:100% Green:0 Red: 100% Blue: 100% Green:0-100% Red: 100% Blue: 100% Green:100%
4	0-2 3-255	Auto Mix Color No function From slow to fast
5	0-2 3-255	Color Change No function Color change with increasing speed
6	0-2 3-255	Red Color Fade No function Color fade with increasing speed
7	0-2 3-255	Green Color Fade No function Color fade with increasing speed
8	0-2 3-255	Blue Color Fade No function Color fade with increasing speed
9	0-2 3-255	Red+Green Color Fade No function Color fade with increasing speed
10	0-2 3-255	Red+Blue Color Fade No function Color fade with increasing speed
11	0-2 3-255	Green+Blue Color Fade No function Color fade with increasing speed

12	0-127 128-255	Sound Control No function Sound control
13	0-255	Red (1,2,3,4) 0-100%
14	0-255	Green (1,2,3,4) 0-100%
15	0-255	Blue (1,2,3,4) 0-100%
16	0-255	Red (5,6,7,8) 0-100%
17	0-255	Green (5,6,7,8) 0-100%
18	0-255	Blue (5,6,7,8) 0-100%
19	0-255	Red (9,10,11,12) 0-100%
20	0-255	Green (9,10,11,12) 0-100%
21	0-255	Blue (9,10,11,12) 0-100%
22	0-255	Red (13,14,15,16) 0-100%
23	0-255	Green (13,14,15,16) 0-100%
24	0-255	Blue (13,14,15,16) 0-100%
25	0-255	Red (1,5,9,13) 0-100%
26	0-255	Green (1,5,9,13) 0-100%
27	0-255	Blue (1,5,9,13) 0-100%
28	0-255	Red (2,6,10,14) 0-100%

29	0-255	Green (2,6,10,14) 0-100%
30	0-255	Blue (2,6,10,14) 0-100%
31	0-255	Red (3,7,11,15) 0-100%
32	0-255	Green (3,7,11,15) 0-100%
33	0-255	Blue (3,7,11,15) 0-100%
34	0-255	Red (4,8,12,16) 0-100%
35	0-255	Green (4,8,12,16) 0-100%
36	0-255	Blue (4,8,12,16) 0-100%
37	0-255	Red (1,2,5,6) 0-100%
38	0-255	Green (1,2,5,6) 0-100%
39	0-255	Blue (1,2,5,6) 0-100%
40	0-255	Red(9,10,13,14) 0-100%
41	0-255	Green(9,10,13,14) 0-100%
42	0-255	Blue(9,10,13,14) 0-100%
43	0-255	Red(11,12,15,16) 0-100%
44	0-255	Green(11,12,15,16) 0-100%
45	0-255	Blue(11,12,15,16) 0-100%
46	0-255	Red(3,4,7,8) 0-100%

47	0-255	Green(3,4,7,8) 0-100%
48	0-255	Blue(3,4,7,8) 0-100%
49	0-255	Red(1) 0-100%
50	0-255	Green(1) 0-100%
51	0-255	Blue(1) 0-100%
52	0-255	Red(2) 0-100%
53	0-255	Green(2) 0-100%
54	0-255	Blue(2) 0-100%
55	0-255	Red(3) 0-100%
56	0-255	Green(3) 0-100%
57	0-255	Blue(3) 0-100%
58	0-255	Red(4) 0-100%
59	0-255	Green(4) 0-100%
60	0-255	Blue(4) 0-100%
61	0-255	Red(5) 0-100%
62	0-255	Green(5) 0-100%
63	0-255	Blue(5) 0-100%
64	0-255	Red(6) 0-100%

65	0-255	Green(6) 0-100%
66	0-255	Blue(6) 0-100%
67	0-255	Red(7) 0-100%
68	0-255	Green(7) 0-100%
69	0-255	Blue(7) 0-100%
70	0-255	Red(8) 0-100%
71	0-255	Green(8) 0-100%
72	0-255	Blue(8) 0-100%
73	0-255	Red(9) 0-100%
74	0-255	Green(9) 0-100%
75	0-255	Blue(9) 0-100%
76	0-255	Red(10) 0-100%
77	0-255	Green(10) 0-100%
78	0-255	Blue(10) 0-100%
79	0-255	Red(11) 0-100%
80	0-255	Green(11) 0-100%
81	0-255	Blue(11) 0-100%
82	0-255	Red(12) 0-100%

83	0-255	Green(12) 0-100%
84	0-255	Blue(12) 0-100%
85	0-255	Red(13) 0-100%
86	0-255	Green(13) 0-100%
87	0-255	Blue(13) 0-100%
88	0-255	Red(14) 0-100%
89	0-255	Green(14) 0-100%
90	0-255	Blue(14) 0-100%
91	0-255	Red(15) 0-100%
92	0-255	Green(15) 0-100%
93	0-255	Blue(15) 0-100%
94	0-255	Red(16) 0-100%
95	0-255	Green(16) 0-100%
96	0-255	Blue(16) 0-100%

48 DMX channels:

CH	Value	Function
1	0-255	Red(1) 0-100%

2	0-255	Green(1) 0-100%
3	0-255	Blue(1) 0-100%
4	0-255	Red(2) 0-100%
5	0-255	Green(2) 0-100%
6	0-255	Blue(2) 0-100%
7	0-255	Red(3) 0-100%
8	0-255	Green(3) 0-100%
9	0-255	Blue(3) 0-100%
10	0-255	Red(4) 0-100%
11	0-255	Green(4) 0-100%
12	0-255	Blue(4) 0-100%
13	0-255	Red(5) 0-100%
14	0-255	Green(5) 0-100%
15	0-255	Blue(5) 0-100%
16	0-255	Red(6) 0-100%
17	0-255	Green(6) 0-100%
18	0-255	Blue(6) 0-100%
19	0-255	Red(7) 0-100%

20	0-255	Green(7) 0-100%
21	0-255	Blue(7) 0-100%
22	0-255	Red(8) 0-100%
23	0-255	Green(8) 0-100%
24	0-255	Blue(8) 0-100%
25	0-255	Red(9) 0-100%
26	0-255	Green(9) 0-100%
27	0-255	Blue(9) 0-100%
28	0-255	Red(10) 0-100%
29	0-255	Green(10) 0-100%
30	0-255	Blue(10) 0-100%
31	0-255	Red(11) 0-100%
32	0-255	Green(11) 0-100%
33	0-255	Blue(11) 0-100%
34	0-255	Red(12) 0-100%
35	0-255	Green(12) 0-100%
36	0-255	Blue(12) 0-100%
37	0-255	Red(13) 0-100%

38	0-255	Green(13) 0-100%
39	0-255	Blue(13) 0-100%
40	0-255	Red(14) 0-100%
41	0-255	Green(14) 0-100%
42	0-255	Blue(14) 0-100%
43	0-255	Red(15) 0-100%
44	0-255	Green(15) 0-100%
45	0-255	Blue(15) 0-100%
46	0-255	Red(16) 0-100%
47	0-255	Green(16) 0-100%
48	0-255	Blue(16) 0-100%

24 DMX channels:

CH	Value	Function
1	0-255	Red(1,2,3,4) 0-100%
2	0-255	Green(1,2,3,4) 0-100%
3	0-255	Blue(1,2,3,4) 0-100%
4	0-255	Red(5,6,7,8) 0-100%

5	0-255	Green(5,6,7,8) 0-100%
6	0-255	Blue(5,6,7,8) 0-100%
7	0-255	Red(9,10,11,12) 0-100%
8	0-255	Green(9,10,11,12) 0-100%
9	0-255	Blue(9,10,11,12) 0-100%
10	0-255	Red(13,14,15,16) 0-100%
11	0-255	Green(13,14,15,16) 0-100%
12	0-255	Blue(13,14,15,16) 0-100%
13	0-255	Red(1,5,9,13) 0-100%
14	0-255	Green(1,5,9,13) 0-100%
15	0-255	Blue(1,5,9,13) 0-100%
16	0-255	Red(2,6,10,14) 0-100%
17	0-255	Green(2,6,10,14) 0-100%
18	0-255	Blue(2,6,10,14) 0-100%
19	0-255	Red(3,7,11,15) 0-100%
20	0-255	Green(3,7,11,15) 0-100%
21	0-255	Blue(3,7,11,15) 0-100%
22	0-255	Red(4,8,12,16) 0-100%

23	0-255	Green(4,8,12,16) 0-100%
24	0-255	Blue(4,8,12,16) 0-100%

6 DMX channels:

CH	Value	Function
1	0-255	Dimmer 0-100%
2	0-10 11-30 31-200 201-225 226-250 251-255	Switching the LEDs/Strobe LED OFF Neutral Strobe with increase speed Random Strobe 1 with increase speed Random Strobe 2 with increase speed Neutral
3	0-255	Red 0-100%
4	0-255	Green 0-100%
5	0-255	Blue 0-100%
6	0-127 128-255	Sound Control No function Sound control

4.5 LED Rangement:

4	8	12	16
3	7	11	15
2	6	10	14
1	5	9	13

5. Technical Specifications

Input Voltage	AC100V -240V, 50Hz/60Hz
Lamp resource	16x30W RGB COB LED
Control model	Auto,sound,DMX512 signal
Max temperature	104°F(40°C)
Outside size	360x385x190mm
N.W	10kg